

# INSTALLATION GUIDE

## HIGH-FLOW INTAKE KIT FOR BMW F90/F92/F93/ G30/G15/G16 M5/M5C/M5CS/M8/M8C/M850I/M550I/750I

### WHAT IS INCLUDED

1. Intake Kit
2. High-flow air filters
3. Hardware



### NOTES

Always make sure the car is safe to work on. Do not work on a hot motor.

## STEP 1

Remove the plastic DME covers.




## STEP 2

Remove the 2 bolts that secure the brace.

Loosen the clamp that connects the intake pipe to the turbo inlet pipe indicated in yellow.

Repeat for the other side.

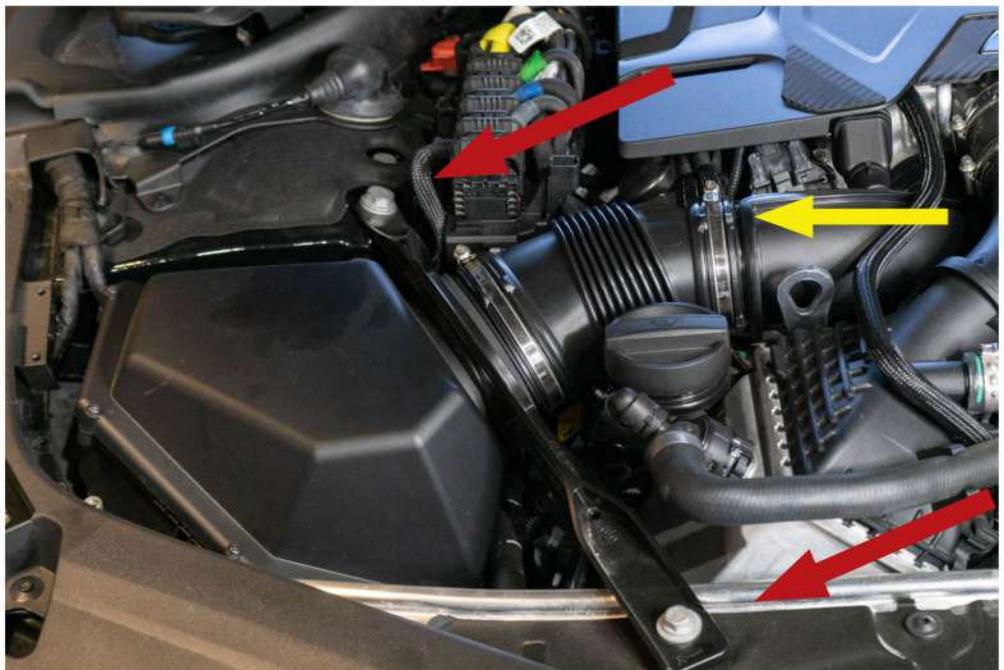

### STEP 3

Before fully removing the air box unclip the coolant hose from the air-box. This is on the passenger side.



### STEP 4

Remove the intake.



### STEP 5

On the driver side of the vehicle there is a vacuum line that you need to remove before the air-box removal.



### STEP 6

With the provided foam strip cut to size as shown in the image.

Note: This is on the top side of the brace.



## STEP 7

**IMPORTANT:** There are 2 sets of reducer couplers. One set has a slightly larger diameter and these are for the S63TU variants.

The shorter intake pipe goes on the right hand-side (passenger side) of the vehicle.

Loosely install as shown.



## STEP 8

Using alcohol or a mild degrease agent wipe the velocity stack filter before installing.



## STEP 9

Install the air filter.

You can now secure all bolts and clamps.

Reinstall the DME covers.



## STEP 10

You are done!

